

CHILDHOME
MAKES MY LITTLE WORLD COMPLETE

made with love ♥



EN INSTRUCTION MANUAL



**EVOLUX
BOUNCER**



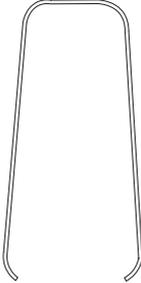
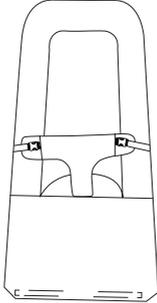
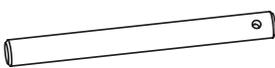 
UCHEVOBONx



Montage handleiding
 Assembly instructions
 Notice de montage
 Montageanweisungen
 Istruzioni per il montaggio
 Instrucciones de montarlo
 Instruções de montagem
 Szerelési útmutató
 Montážny návod



made with love ♥

No°	item	# pieces
1	 <p>frame pre-assembled</p>	x1
2	 <p>3D mesh cover pre-assembled</p>	x1
3	 <p>front metal bar pre-assembled</p>	x1
4	 <p>rear metal bar pre-assembled</p>	x1
5	 <p>rubber feet pre-assembled</p>	x4
6	 <p>wooden legs pre-assembled</p>	x2



PRE-ASSEMBLED

TOOLS TO ASSEMBLE

No°	item	# pieces	No°	item	# pieces
A	 M6x50MM	x2	D	 M6x20MM	x2
B	 M6x20MM	x2	E		x2
C		x2	F	 Allen key	x1



- 1 Remove cover of the frame.



- 2 Put both sides of the frame simultaneously inside insert



3 Assemble D+E on both sides



4 Slide cover over the frame down to the bottom

www.childhome.com



5 Attach velcro on the other side on the back





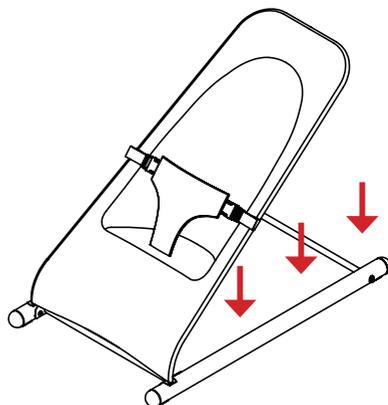
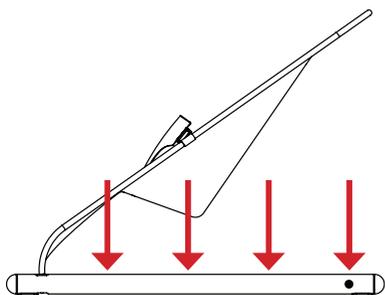
6 Open the harness by pressing the sides of the buckle



7 Tighten the harness by pulling the straps

www.childhome.com

ASSEMBLY NOTICE



If the reclined cradle isn't stable, please loosen all the screws. Fasten the screws while pushing the wooden base to the ground.

For U.S. & Canada Customers Only

Registration

Childhome does extensive testing above and beyond that required by law. However, if through some unforeseen circumstance we need to issue a recall, we ask that you please register your high chair. We have two easy ways to register: either fill out the enclosed registration card or register online at <http://register.childhome.com>.

Warranty

Childhome warrants to the original purchaser of every new Childhome high chair that the unit will be free from defects in material and workmanship when used properly in accordance with the instructions contained in the product manual supplied with each high chair unit. Childhome's obligation under this warranty is limited to a period of twelve (12) months from the date of purchase and applies only in the country of original purchase. The warranty is only valid for a product purchased from a Childhome authorized retailer or distributor. Warranty is invalid for products purchased used. If the unit is determined by Childhome to be defective within twelve (12) months of purchase, the warranty will cover the repair or replacement of the unit, parts, or assemblies. Childhome assumes no liability for parts or labor coverage for component failure or other damage to the unit resulting from improper usage or failure to clean and/or maintain product as set forth in the product manual provided with the unit. This warranty does not cover claims resulting from: misuse, abuse, alteration, inflicted damage, accidental damage, normal wear and tear, involvement in an accident, and/or failure to comply with the instructions on assembly, maintenance and use. Childhome does not assume any responsibility for personal injury or property damage incurred as a result of improper use or unauthorized modification of the product.

For International Customers

All Childhome products are covered by a warranty of at least twelve (12) months. The warranty may vary by country and is subject to the conditions set forth in the country of original purchase, in order to comply with applicable law. Where permitted by law, the warranty is only valid in the country of original purchase, and for new products purchased from a Childhome authorized retailer or distributor. For complete details or to make any warranty claim, please contact the local Childhome authorized distributor in the country of original purchase. A list of distributors can be found at www.childhome.com.

BOUNCER

IMPORTANT! READ AND FOLLOW THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE.

READ ALL INSTRUCTIONS BEFORE USE OF THE INFANT BOUNCER

KEEP INSTRUCTIONS FOR FUTURE USE

WARNING

Fall Hazard: Babies have suffered skull fractures falling while in and from bouncers.

- Use bouncer **ONLY** on floor.
- **NEVER** lift or carry baby in bouncer.

Suffocation Hazard: Babies have suffered when bouncers tipped over on soft surfaces.

- **NEVER** use on a bed, sofa, cushion, or other soft surface.
- **NEVER** leave baby unattended.

To prevent **falls** and **suffocation**:

- **ALWAYS** use restraints and adjust to fit snugly, even if baby fall asleep.
- **STOP** using bouncer when baby starts trying to sit up or has reached 20lb / 9kg, whichever comes first.



SAFETY INSTRUCTIONS

1. **WARNING!** Never leave the child unattended.
2. **WARNING:** Do not use the bouncer once your child can sit unaided.
3. **WARNING:** This bouncer is not intended for prolonged periods of sleeping.
4. **WARNING:** It is dangerous to use this bouncer on an elevated surface e.g. a table.
5. **WARNING:** Always use the restraint system.
6. **WARNING:** Do not let children play with this product.
7. **WARNING:** Do not move or lift this product with the baby inside.
8. This bouncer does not replace a cot or bed. If your child needs to sleep, then he should be placed in a suitable cot or bed.
9. **WARNING!** Do not use this infant bouncer seat if it is damaged or broken.
10. **WARNING!** Do not use the product if any part is broken, torn or missing. Do not use spare parts other than those approved by the manufacturer.
11. Additional or replacement parts should be obtained from Childhome.
12. The manufacturer's warranty is not transferable and may therefore only be invoked by the first owner.
13. This bouncer is suitable for children aged up to 9 months and a max. weight of 9 kg/20lbs.
14. **WARNING!** Be aware of the risk of open fires and other sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the product
15. **WARNING!** To avoid danger of suffocation remove plastic cover before using this article. This cover shall be destroyed or kept away from children.
16. CONFORM TO EUROPEAN SAFETY REQUIREMENTS EN 12790:2009
17. CONFORM TO AMERICAN SAFETY REQUIREMENTS ASTM F2167-19



CLEANING AND MAINTENANCE RECOMMENDATION

18. To wash the fabric seat, loosen the velcro strip at the bottom and pull it off the frame.
19. Wash separately at 30°C. Do not tumble-dry.
20. Clean the frame and base by wiping with a damp cloth.
21. Do not use corrosive products.
22. Solid wood furniture can change slightly in its appearance during use: sunlight can alter the colour, while fluctuations in atmospheric humidity can affect the surface treatment. However this does not affect the value, functionality or service life of the furniture.

CHILDHOME

MAKES MY LITTLE WORLD COMPLETE

made with love ♥



imported by

BÉABA, USA

555 8th Avenue, Suite 403

New York, NY 10018

Info@beabausa.com

Toll free phone: 1-855-60-BEABA (23222)

www.childhome.com